

NOTE:


ON EXISTING DUCTWORK IT IS SUGGESTED TO TEST THE ADHESION OF THE ROLLED SEALANT PRIOR TO PERFORMING THE SEALING WORK. FOR OLDER DUCTWORK THE INSTALLER CAN USE AN ADHESIVE TO PRIME THE SURFACE FOR ROLLED SEALANT APPLICATION.

FO-2A

SLIP & DRIVE

CARLISLE
HVAC PRODUCTS

© 2014 CARLISLE CORPORATION

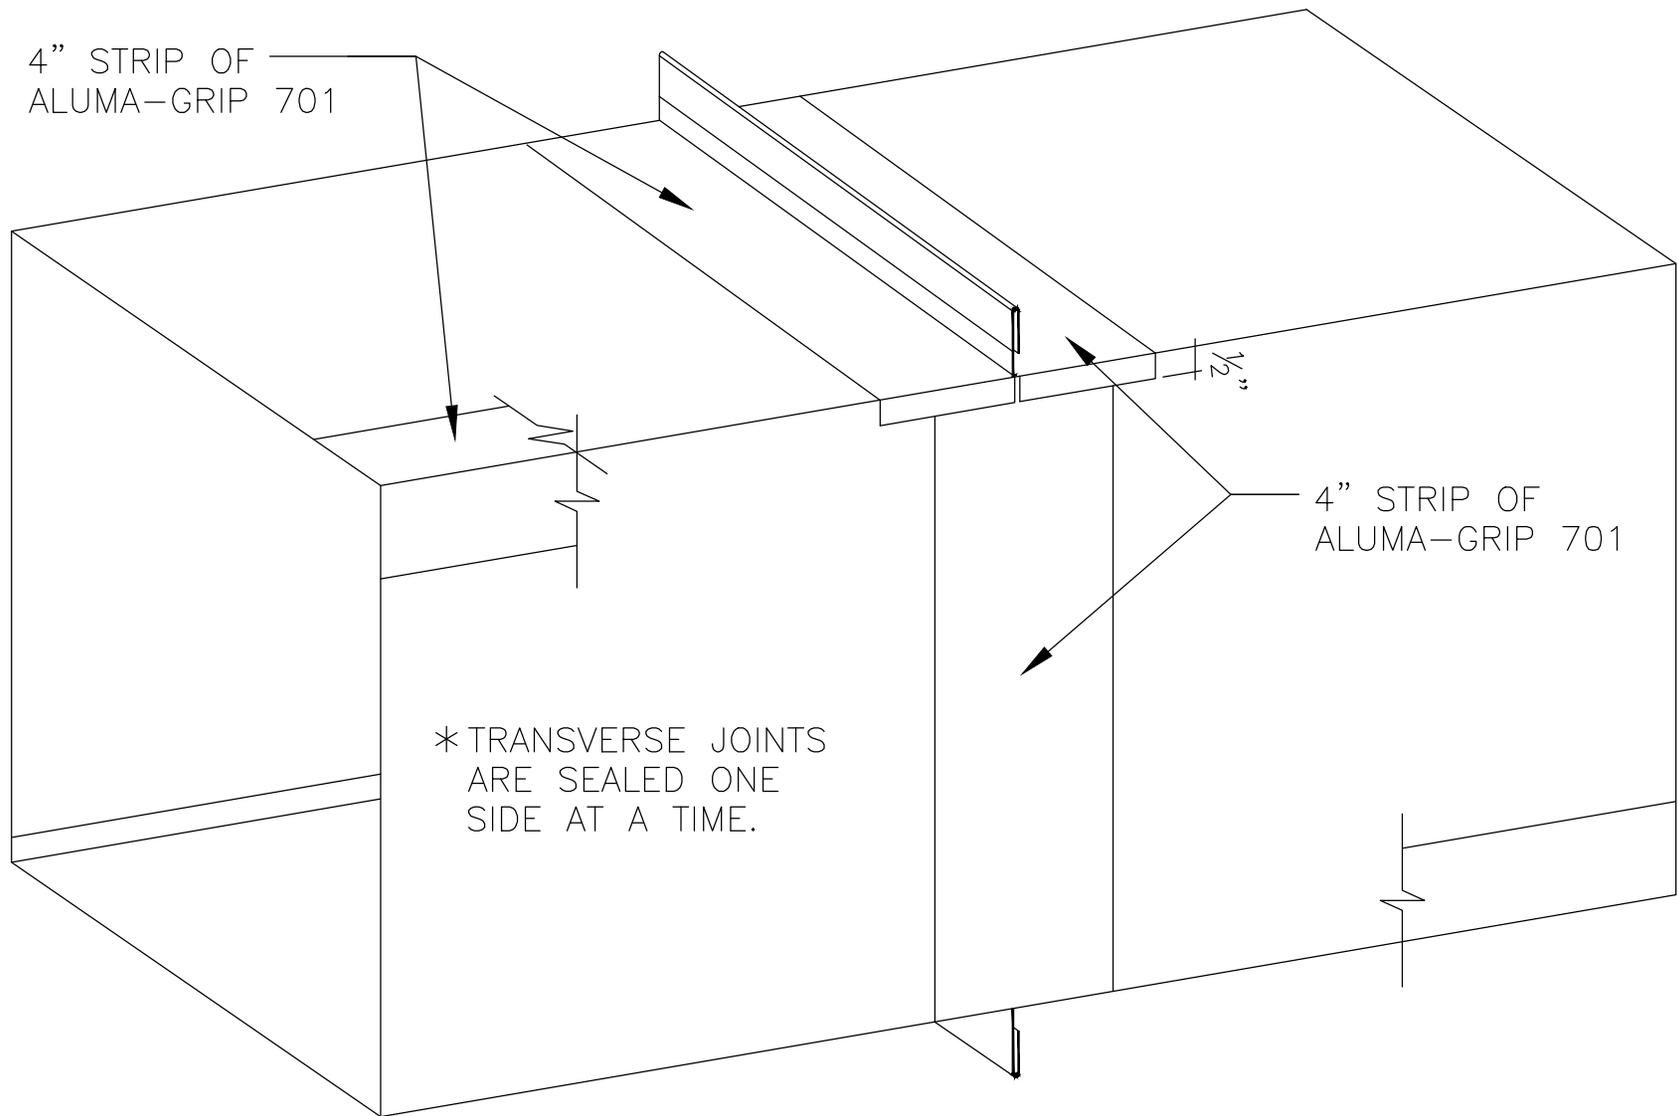

NOTES:

1. CUT AND CENTER 4" WIDE COVER STRIP OF AFT-701. SQUEEGEE ALUMA-GRIP 701 TO CONFORM TO SURFACE AND TO ELIMINATE WRINKLES.
2. THE STANDING SLIP WILL REQUIRE TWO SEPERATE PIECES OF ALUMA-GRIP 701.
3. SPLICE AFT-701 INTO EACH SIDE A MINIMUM OF 1/2".

FO-2C

SLIP & DRIVE

CARLISLE
HVAC PRODUCTS

© 2014 CARLISLE CORPORATION