


FSS-3A

DRIVE & DRIVE



© 2017 CARLISLE CORPORATION

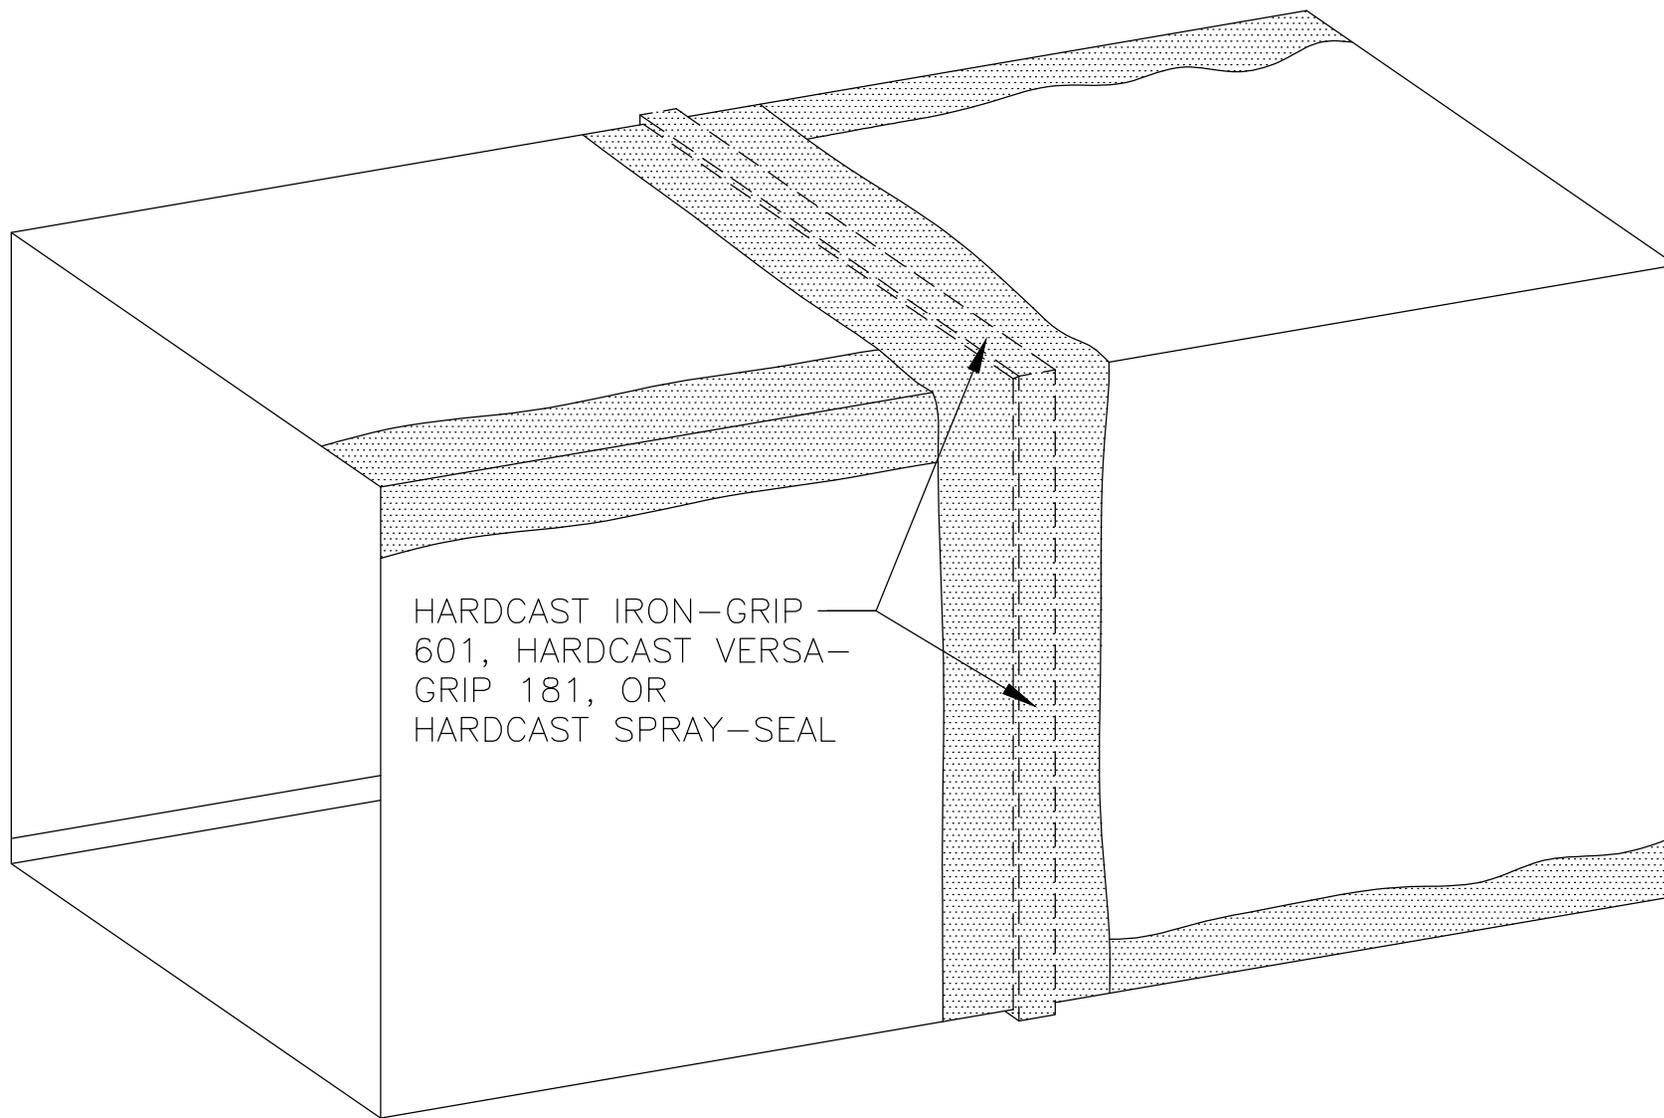

HARDCAST IRON-GRIP
601, HARDCAST VERSA-
GRIP 181, OR
HARDCAST SPRAY-SEAL

NOTES:


1. APPLY DUCT SEALANT PER MANUFACTURER'S TECHNICAL DATA SHEET.
2. DUCT SEALANT MUST DRY A MINIMUM OF 48 HOURS PRIOR TO PLACING ALUMA-GRIP 701.
3. DUCT SEAL ALL DUCT WALL PENETRATIONS.

FSS-3B

DRIVE & DRIVE

CARLISLE
HVAC PRODUCTS

© 2017 CARLISLE CORPORATION

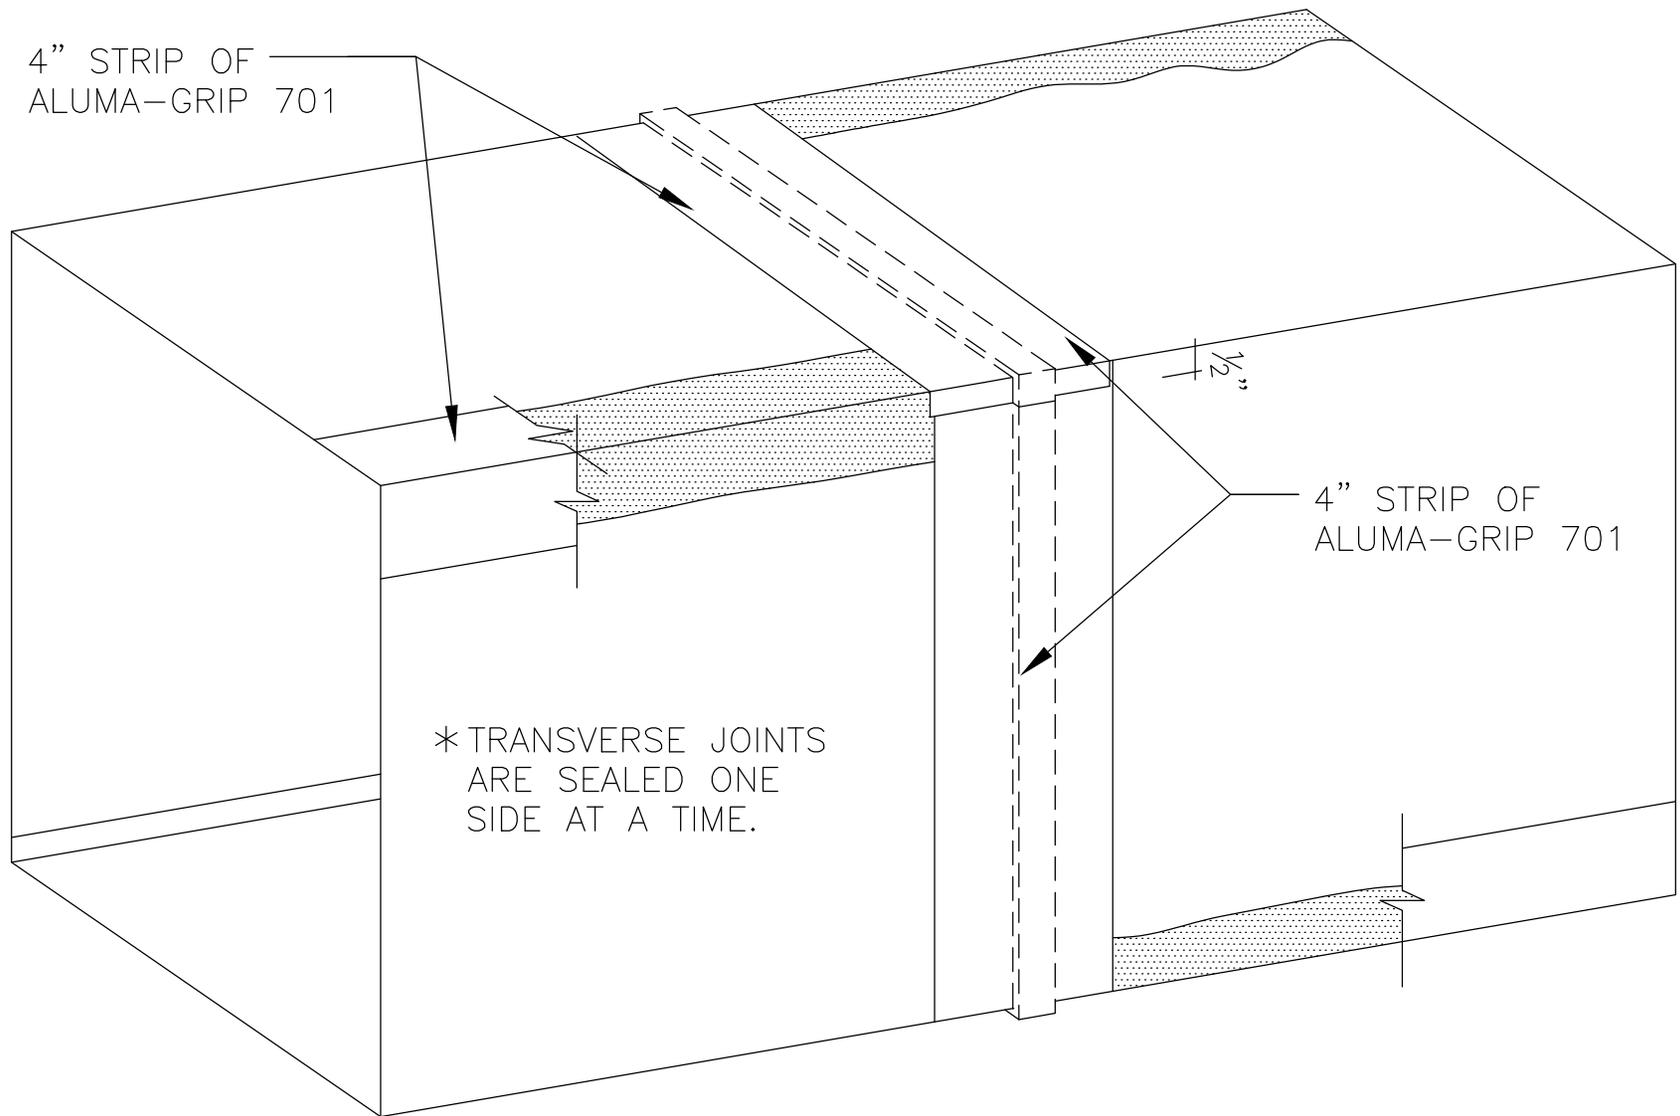

NOTES:

1. CUT AND CENTER 4" WIDE COVER STRIP OF AFT-701 OVER THE DRIED DUCT SEALANT. SQUEEGEE ALUMA-GRIP 701 TO ELIMINATE WRINKLES.
2. SPLICE AFT-701 INTO EACH SIDE A MINIMUM OF $\frac{1}{2}$ ".

FSS-3C

DRIVE & DRIVE

CARLISLE
HVAC PRODUCTS

© 2017 CARLISLE CORPORATION