


FSS-2A

SLIP & DRIVE

CARLISLE
HVAC PRODUCTS

© 2013 CARLISLE CORPORATION

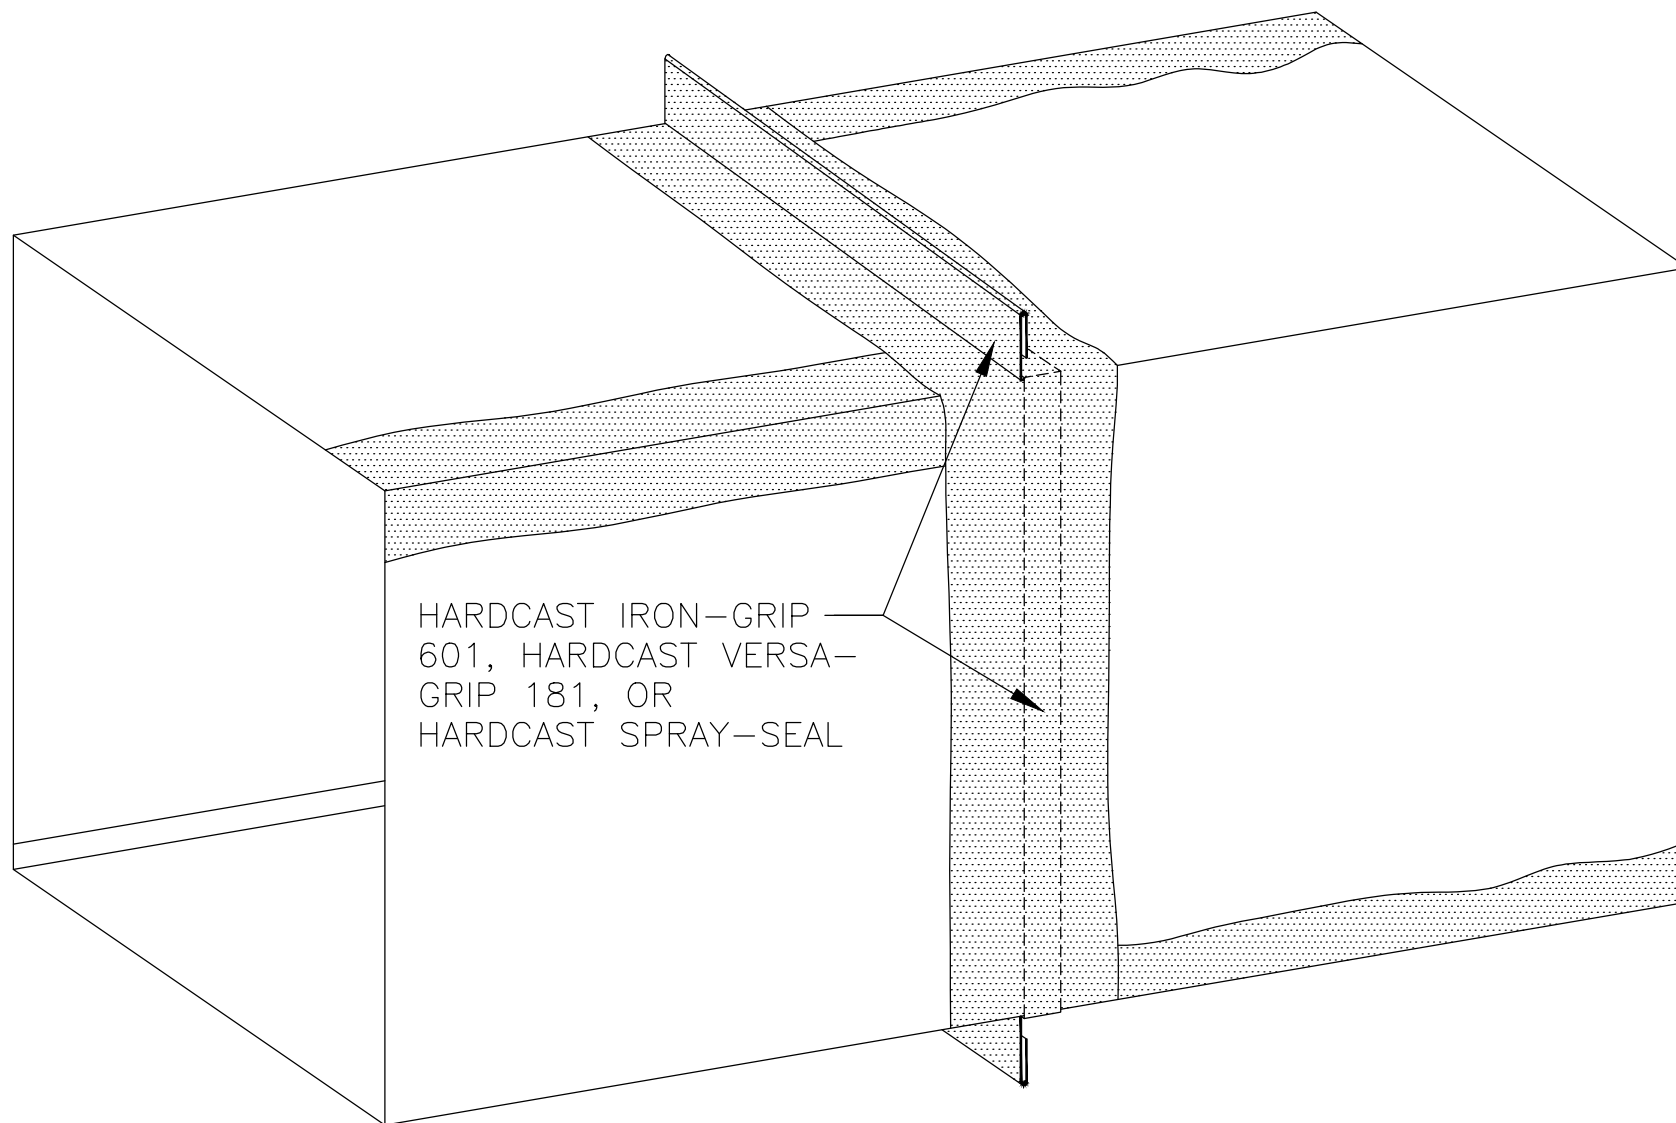

NOTES:


1. APPLY DUCT SEALANT PER MANUFACTURER'S TECHNICAL DATA SHEET.
2. DUCT SEALANT MUST DRY A MINIMUM OF 48 HOURS PRIOR TO PLACING ALUMA-GRIP 701.
3. DUCT SEAL ALL DUCT WALL PENETRATIONS.

FSS-2B

SLIP & DRIVE

CARLISLE
HVAC PRODUCTS

© 2013 CARLISLE CORPORATION

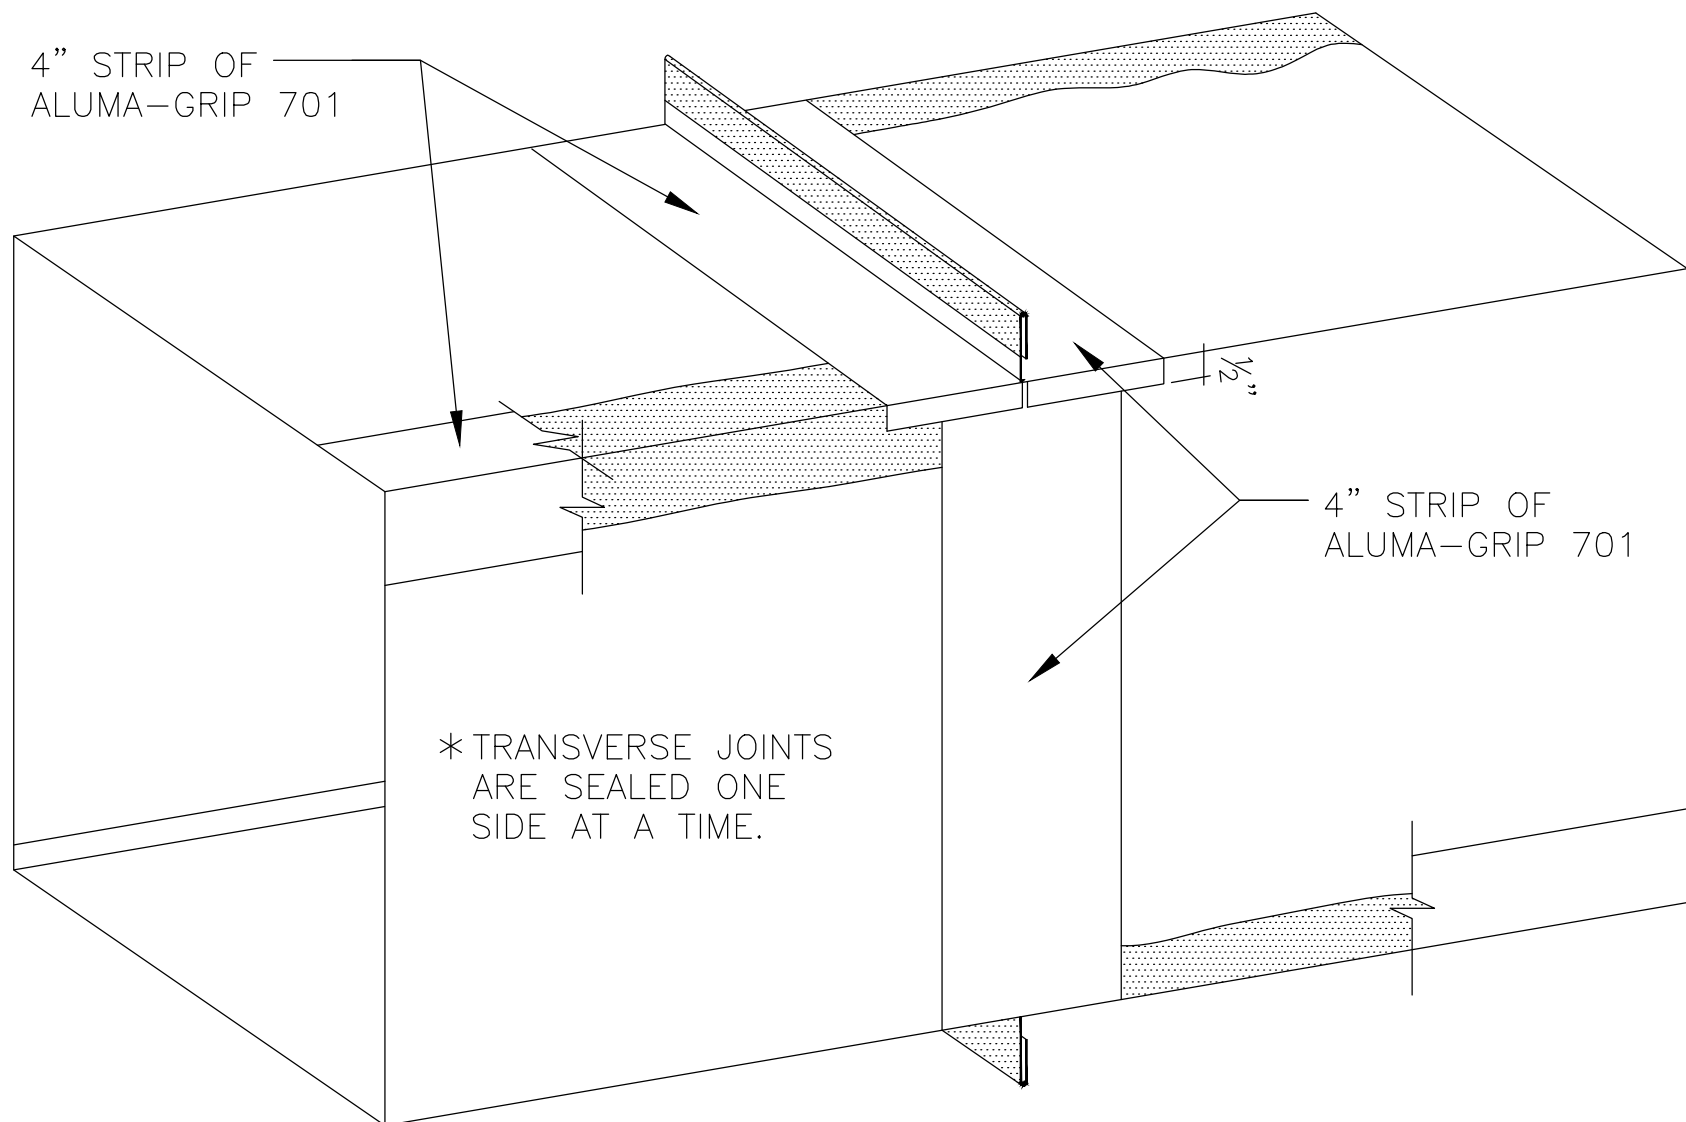

NOTES:

1. CUT AND CENTER 4" WIDE COVER STRIP OF AFT-701 OVER THE DRIED DUCT SEALANT. SQUEEGEE ALUMA-GRIP 701 TO ELIMINATE WRINKLES.
2. THE STANDING SLIP WILL REQUIRE TWO SEPARATE PIECES OF ALUMA-GRIP 701.
3. SPLICE AFT-701 INTO EACH SIDE A MINIMUM OF 1/2".

FSS-2C

SLIP & DRIVE

CARLISLE
HVAC PRODUCTS

© 2013 CARLISLE CORPORATION